




PART NUMBER 0785L-24A
 ITEM NAME 785 nm SLM LASER

PRODUCT DATASHEET

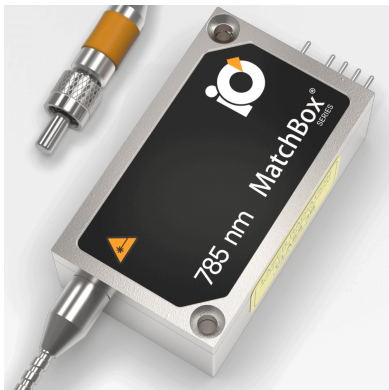

DESCRIPTION

785 nm single-frequency laser fits matchbox size enclosure and the radiation is delivered via multi-mode (MM) fiber. Such configuration is particularly suitable for Raman spectroscopy applications where cost efficient excitation source is needed and the system is polarization independent.

Note:


In optical systems with strong back-reflections (e.g. more than 10%), the laser must be protected by using an optical isolator with at least 20 dB isolation. Typical applications include interferometry, confocal microscopy (especially working with reflective samples), etc. Failure to comply with these requirements will render the warranty void for cases of COD (Catastrophic Optical Damage) of laser diode facets.

SPECIFICATIONS

Specifications updated: 24 January 2024


| Parameter | Minimum Value | Typical Value | Maximum Value |
|---|---------------|---------------------------|---------------|
| Central wavelength, nm | 784.7 | 784.8 | 785.1 |
| Longitudinal modes | - | Single | - |
| Spectral line width FWHM, MHz | - | 2 ¹ | 8 |
| Output power, mW | - | 100 ² | - |
| Side-mode suppression ratio (SMSR), dB | - | 50 | - |
| Power stability, % (RMS, 8 hrs) | 0.02 | 0.05 ³ | 0.25 |
| Power stability, % (peak-to-peak, 8 hrs) | 0.1 | 0.3 ⁴ | 1 |
| Intensity noise, % (RMS, 20 Hz to 20 MHz) | 0.1 | 0.15 ⁵ | 0.6 |
| Control interface type | - | UART ⁶ | - |
| Transversal modes | - | Multiple | - |
| Operation mode | - | APC (CW) | - |
| Modulation bandwidth, MHz | - | N/A ⁷ | - |
| Input voltage, VDC | 4.8 | 5 | 5.3 |
| External power supply requirement | - | +5 V DC, 1.5 A | - |
| Dimensions (WxDxH), mm | - | 50 x 30 x 18 ⁸ | - |
| Fiber length, m | 0.95 | 1 | 1.1 |
| Heat-sinking requirement, °C/W | - | 1 | - |
| Optimum heatsink temperature, °C | 18 | 25 | 32 |
| Warm up time, mins (cold start) | 0.2 | 1 | 2 |
| Temperature stabilization | - | Internal TEC | - |
| Overheat protection | - | Yes | - |
| Storage temperature, °C (non-condensing) | -10 | - | 50 |
| Net weight, kg | 0.1 | 0.12 | 0.14 |

TYPICAL SPECTRUM

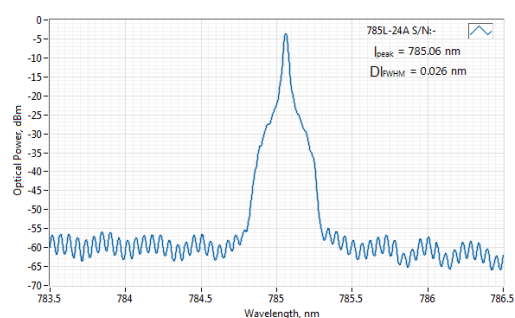


Typical spectrum of 0785 nm diode laser. Measured with 20 pm resolution.

TYPICAL NEAR FIELD

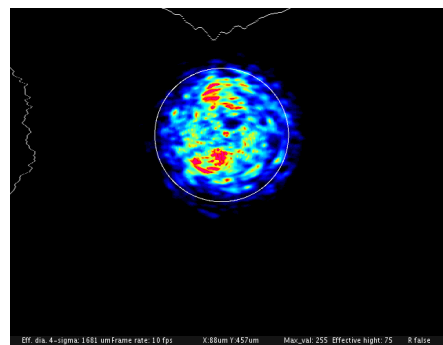

| | | | |
|-----------------------------------|-----|---|-------|
| Max. power consumption, W | 0.4 | 2 | 10 |
| Warranty, months (op. hrs) | - | 14 (10000) ⁹ | - |
| RoHS | - | Yes | - |
| CE compliance | - | - General Product Safety Directive (GPSD) 2001/95/EC - (EMC) Directive 2004/108/EC | - |
| Laser safety class | - | 3B | - |
| OEM lasers are not compliant with | - | IEC60825-1:2014 (compliant using additional accessories) | - |
| Country of origin | - | Lithuania | - |
| Spectral line width FWHM, pm | - | 0.004 ¹⁰ | 0.016 |

DRAWING

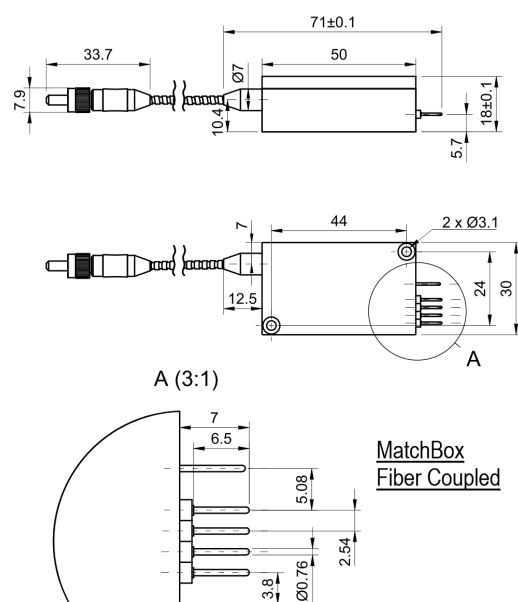

¹ Measured using HighFinesse LineWidth Analyzer LWA-10k having 10 kHz resolution. Linewidth Analyzer testing is not provided for each laser being manufactured, the standard test is OSA measurement with 20-30 pm resolution instead.

² The output power of SLM lasers shall not be tuned and SLM performance is not guaranteed at power ratings other than factory preset. However, the power setting capability is not disabled. External attenuators are recommended instead

³ The long term power test is carried out at constant laser body temperature (+/-0.1 °C) using an optical power meter with an input bandwidth of 10 Hz. The actual measurement rate has a period of about 20 seconds to 1 minute.

⁴ The long term power test is carried out at constant laser body temperature (+/-0.1 °C) using an optical power meter with an input bandwidth of 10 Hz. The actual measurement rate has a period of about 20 seconds to 1 minute.

⁵ Noise level is measured with a fast photodiode connected to an oscilloscope. The overall system bandwidth is from 2 kHz to 20 MHz.

⁶ Break-out-boxes AM-C8 and AM-C3 can be used for conversion of UART communication to either USB or RS232.

⁷ SLM lasers shall not be modulated - use external modulators instead.

⁸ Excluding control interface pins and an output window/fiber assembly.

⁹ Whichever occurs first. The laser has an integrated operational hours counter.

¹⁰ Converted from bandwidth value.

Note: Product specifications are subject to change without prior notice to improve reliability, function or design or otherwise.