



PART NUMBER 1030L-13B
 ITEM NAME 1030 NM LASER

PRODUCT DATASHEET



DESCRIPTION

1030 nm DPSS laser features high power with very good TEM₀₀ beam, with M² of <1.2 and SM (single-mode) fiber only improves this parameter to outstanding 1.05. It is often used for inspection of optical components at around 1030 nm radiation wavelength. This DPSS laser is based on Yb:YAG gain medium, therefore, exhibits a very low quantum defect.

By default, this type of laser is built with FC/PC connector, but other fiber terminations are available upon request. Details about non-standard connector and the fiber used with it should be discussed with the Integrated Optics sales team.

SPECIFICATIONS

Specifications updated: 29 August 2023


| Parameter | Minimum Value | Typical Value | Maximum Value |
|---|---------------|---------------------------|---------------|
| Central wavelength, nm | 1028 | 1030 | 1032 |
| Longitudinal modes | - | Multiple | - |
| Spectral line width FWHM, nm | 0.3 | 0.7 | 1.3 |
| Output power, mW | - | 350 ¹ | - |
| Power stability, % (RMS, 8 hrs) | 0.01 | 0.1 ² | 0.3 |
| Power stability, % (peak-to-peak, 8 hrs) | 0.05 | 0.5 ³ | 1.5 |
| Intensity noise, % (RMS, 20 Hz to 20 MHz) | 0.5 | 1.5 ⁴ | 15 |
| Transversal modes | - | TEM ₀₀ | - |
| M ² effective | - | 1.05 | 1.1 |
| Control interface type | - | UART ⁵ | - |
| Operation mode | - | APC (CW) | - |
| Input voltage, VDC | 4.8 | 5 | 5.3 |
| External power supply requirement | - | +5 V DC, 5 A | - |
| Dimensions (WxDxH), mm | - | 50 x 30 x 18 ⁶ | - |
| Fiber length, m | 0.95 | 1 | 1.1 |
| Heat-sinking requirement, °C/W | - | 0.5 | - |
| Optimum heatsink temperature, °C | 15 | 20 | 30 |
| Warm up time, mins (cold start) | 0.2 | 1 | 2 |
| Temperature stabilization | - | Internal TEC | - |
| Overheat protection | - | Yes | - |
| Storage temperature, °C (non-condensing) | -10 | - | 50 |
| Net weight, kg | 0.1 | 0.12 | 0.14 |
| Max. power consumption, W | 5 | 10 | 20 |

TYPICAL SPECTRUM

Spectrum of 1030 nm Laser

Typical spectrum of 1030 nm DPSS laser. Measured with 20 pm resolution.

TYPICAL NEAR FIELD

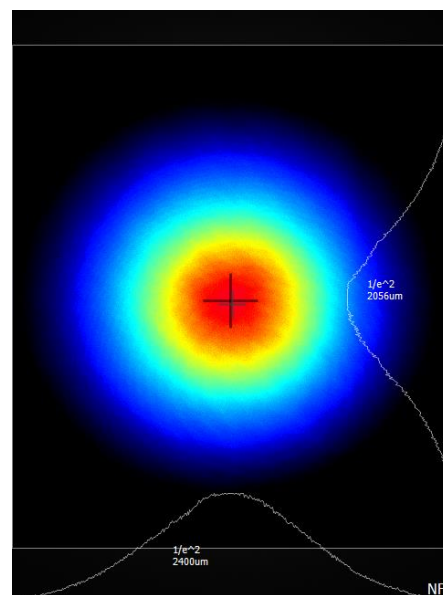

| | | | |
|-----------------------------------|---|---|---|
| Warranty, months (op. hrs) | - | 14 (10000) ⁷ | - |
| RoHS | - | Yes | - |
| CE compliance | - | - General Product Safety Directive (GPSD) 2001/95/EC - (EMC) Directive 2004/108/EC | - |
| Laser safety class | - | 3B | - |
| OEM lasers are not compliant with | - | IEC60825-1:2014 (compliant using additional accessories) | - |
| Country of origin | - | Lithuania | - |

¹ The optical power can be tuned from virtually 0% to 100%. However, other specifications, such as central wavelength, power stability, noise, polarization ratio, beam shape, quality and circularity are not guaranteed at power levels other than factory preset power. Significantly worse power stability is to be expected at very low power levels, e.g. <3% from specified nominal power.

² The long term power test is carried out at constant laser body temperature (+/-0.1 °C) using an optical power meter with an input bandwidth of 10 Hz. The actual measurement rate has a period of about 20 seconds to 1 minute.

³ The long term power test is carried out at constant laser body temperature (+/-0.1 °C) using an optical power meter with an input bandwidth of 10 Hz. The actual measurement rate has a period of about 20 seconds to 1 minute.

⁴ Noise level is measured with a fast photodiode connected to an oscilloscope. The overall system bandwidth is from 2 kHz to 20 MHz.

⁵ Break-out-boxes AM-C8 and AM-C3 can be used for conversion of UART communication to either USB or RS232.

⁶ Excluding control interface pins and an output window/fiber assembly.

⁷ Whichever occurs first. The laser has an integrated operational hours counter.

Note: Product specifications are subject to change without prior notice to improve reliability, function or design or otherwise.

DRAWING

