



PART NUMBER 1030L-25B  
 ITEM NAME 1030 NM SLM LASER

## PRODUCT DATASHEET



### DESCRIPTION

1029 nm laser module is a DPSS laser with Yb:YAG gain medium and high power pump. The SLM version of this laser is used for inspection of optical components at a wavelength, which is popular in high power fiber lasers and ultrashort pulse DPSS lasers. The beam of this 1029 nm SLM laser module is delivered through a single-mode polarization-maintaining fiber.

#### Note:


In optical systems with strong back-reflections (e.g. more than 10%), the laser does not have to be protected by using an optical isolator, unless high laser operation stability is required. Typical applications include interferometry, confocal microscopy (especially working with reflective samples), etc.

## SPECIFICATIONS

Specifications updated: 24 January 2024


Parameter	Minimum Value	Typical Value	Maximum Value
Central wavelength, nm	1029	1029.5	1030
Longitudinal modes	-	Single	-
Spectral line width FWHM, MHz	-	2 <sup>1</sup>	4
Output power, mW	-	200 <sup>2</sup>	-
Side-mode suppression ratio (SMSR), dB	-	70	-
Power stability, % (RMS, 8 hrs)	0.02	0.1 <sup>3</sup>	0.5
Power stability, % (peak-to-peak, 8 hrs)	0.1	0.5 <sup>4</sup>	3
Intensity noise, % (RMS, 20 Hz to 20 MHz)	0.5	1.5 <sup>5</sup>	2
Transversal modes	-	TEM00	-
Polarization direction	-	Aligned within the slow axis of the PM fiber and the key position. <sup>6</sup>	-
Polarization extinction ratio (from PM fiber), dB	20	23	-
Control interface type	-	UART <sup>7</sup>	-
Operation mode	-	APC (CW)	-
Modulation bandwidth, MHz	-	N/A <sup>8</sup>	-
Input voltage, VDC	4.8	5	5.3
External power supply requirement	-	+5 V DC, 5 A	-
Dimensions (WxDxH), mm	-	50 x 30 x 18 <sup>9</sup>	-
Beam height from the base, mm	9.9	10.4	10.9
Heat-sinking requirement, °C/W	-	0.5	-
Optimum heatsink temperature, °C	18	25	32

## TYPICAL SPECTRUM

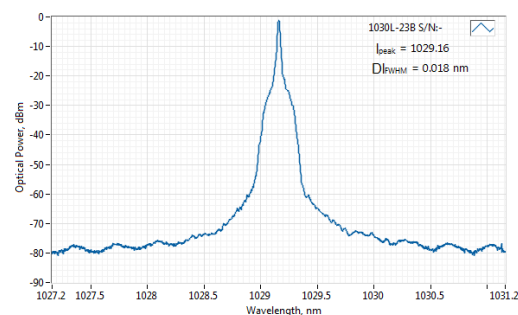


Typical spectrum of 1030 nm DPSS laser. Measured with 20 pm resolution.

## TYPICAL NEAR FIELD

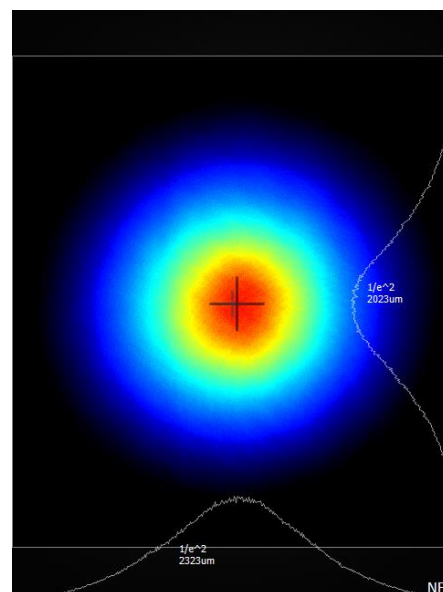

Warm up time, mins (cold start)	1	3	5
Temperature stabilization	-	Internal TEC	-
Overheat protection	-	Yes	-
Storage temperature, °C (non-condensing)	-10	-	50
Net weight, kg	0.1	0.12	0.14
Max. power consumption, W	5	10	20
Warranty, months (op. hrs)	-	14 (10000) <sup>10</sup>	-
RoHS	-	Yes	-
CE compliance	-	- General Product Safety Directive (GPSD) 2001/95/EC - (EMC) Directive 2004/108/EC	-
Laser safety class	-	3B	-
OEM lasers are not compliant with	-	IEC60825-1:2014 (compliant using additional accessories)	-
Country of origin	-	Lithuania	-
Spectral line width FWHM, pm	-	0.007 <sup>11</sup>	0.014

## DRAWING

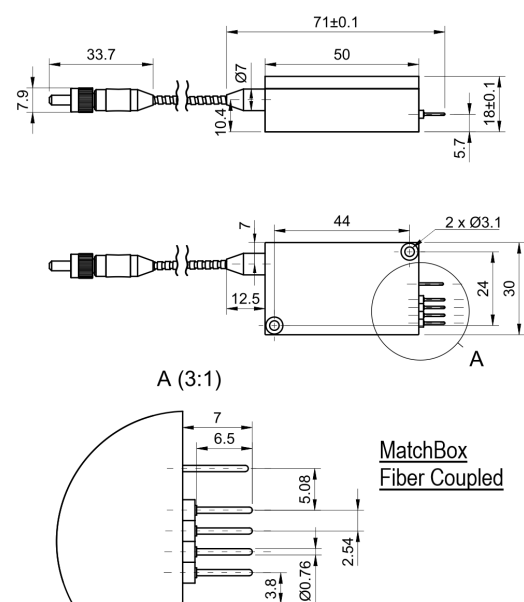

<sup>1</sup> Measured using HighFinesse LineWidth Analyzer LWA-10k having 10 kHz resolution. Linewidth Analyzer testing is not provided for each laser being manufactured, the standard test is OSA measurement with 20-30 pm resolution instead.

<sup>2</sup> The optical power of SLM lasers shall not be tuned and SLM performance is not guaranteed at power ratings other than the factory preset. However, the power setting capability is not disabled. External attenuators are recommended.

<sup>3</sup> The long term power test is carried out at constant laser body temperature (+/-0.1 °C) using an optical power meter with an input bandwidth of 10 Hz. The actual measurement rate has a period of about 20 seconds to 1 minute.

<sup>4</sup> The long term power test is carried out at constant laser body temperature (+/-0.1 °C) using an optical power meter with an input bandwidth of 10 Hz. The actual measurement rate has a period of about 20 seconds to 1 minute.

<sup>5</sup> Noise level is measured with a fast photodiode connected to an oscilloscope. The overall system bandwidth is from 2 kHz to 20 MHz.

<sup>6</sup> With possible error of up to ±5°.

<sup>7</sup> Break-out-boxes AM-C8 and AM-C3 can be used for conversion of UART communication to either USB or RS232.

<sup>8</sup> SLM lasers shall not be modulated - use external modulators instead.

<sup>9</sup> Excluding control interface pins and an output window/fiber assembly.

<sup>10</sup> Whichever occurs first. The laser has an integrated operational hours counter.

<sup>11</sup> Converted from bandwidth value.

Note: Product specifications are subject to change without prior notice to improve reliability, function or design or otherwise.